



24" Whaledrum specs

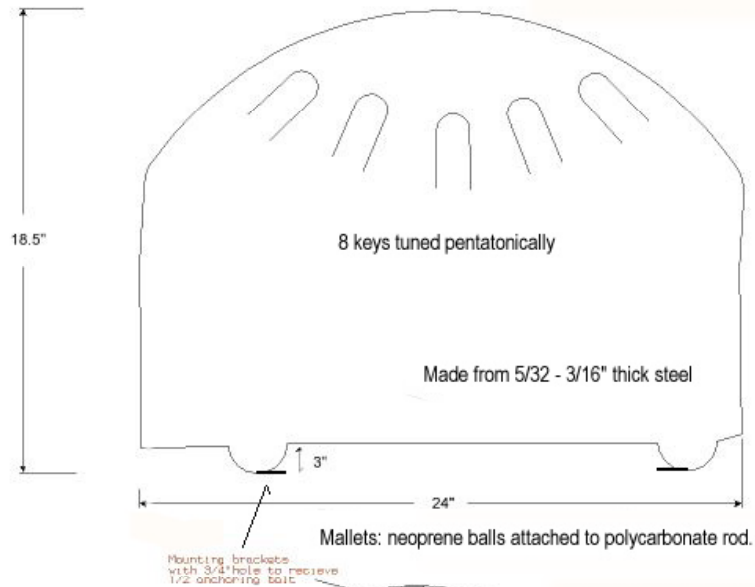

Bottom view

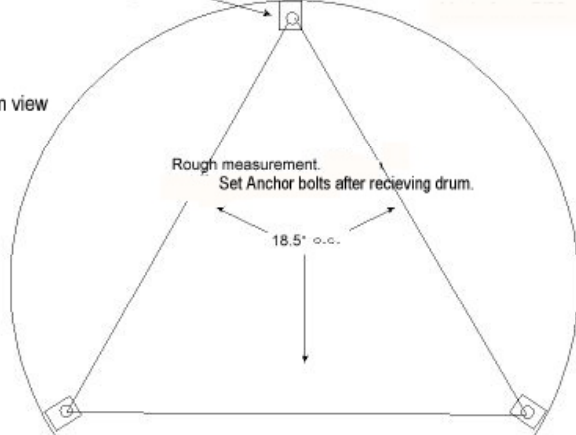

Mounting Instructions:

Bolt down to secure, reinforced, 4" or more thickness concrete footing, slightly larger than the diameter of the Drum or to a deck. You may want to have the footing lower than grade by 1"-2" to hide fasteners.

Use double nuts on the anchor bolts, and optionally an acorn nut on top if there is access under the drum, in order to prevent scratching on bolt top.

Use the included washers under and over the "feet"; and do not over tighten nuts, so as to prevent hampering vibration of drum .



Jim Doble
Elemental Design
(207) 785-2212